

• HORIZONTAL POSITION •


INSIDE RING HOLDER ASSEMBLY FOR VISES

INSTRUCTIONS:

Insert bolt through the mandrel cone and place into the tapered end of the mandrel you have selected (See Illustration). Position ring around the selected mandrel. Turn the bolt into the ring holder frame with the supplied wrench until the ring is snug.

DO NOT OVER TIGHTEN

Damage may occur to ring.

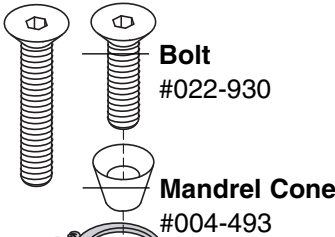

Ring Holder Frame
#004-492


Secure ring holder in a jewelers vise while working on ring.



#002-429 5/32"
HEX WRENCH

CORRECT

WRONG

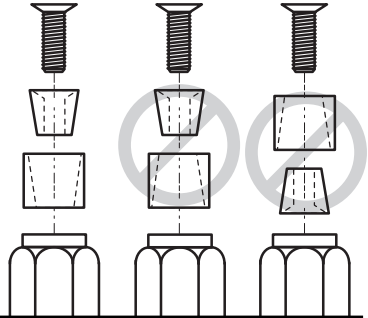


MANDREL

Select the mandrel which is slightly smaller than the inside ring diameter.


#004-170	.575"
#004-171	.625"
#004-172	.675"
#004-173	.725"
#004-174	.775"
#004-216	.825"
#004-217	.875"

EXTRA SET OF MANDRELS FOR LARGE RINGS

PART #004-616

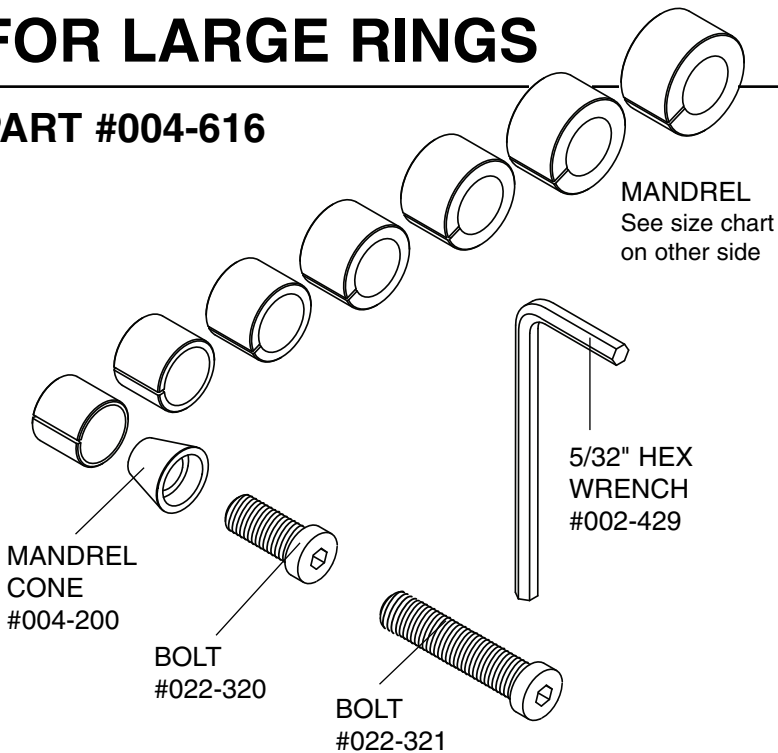

WIDE RING

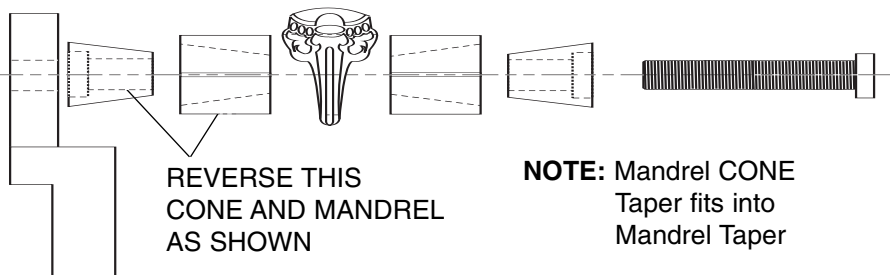

To hold large / wide rings use TWO of the SAME SIZE mandrels and TWO mandrel cones. Insert the long bolt through the first mandrel cone and place cone into the tapered end of the mandrel you have selected. Then reverse the second mandrel and place on bolt. Slide the second cone into that mandrel so that the taper angles match. (See Illustration above) Position ring on the selected mandrel. Tighten the socket head screw into the Ring Post with the supplied wrench until the ring is snug. **DO NOT OVER TIGHTEN** - Damage may occur to the ring being held.