

INSTRUCTIONS


Quick Wheel Change Adapter #001-838

Remove existing thumb screw and wheel from Power Hone. Position the Quick Wheel Change Drive Plate where the wheel was. Secure adapter in position with the Tall Spindle Nut (Do not overtighten). Now, you can simply lift wheels ON and OFF Power Hone.

NOTE: The O-Ring on the Tall Spindle Nut makes for a NO PLAY fit. If you desire, the O-Ring can be removed for a true, but less snug fit.

If you notice any slippage of a wheel, make sure tall spindle nut is tight and/or the O-Ring is clean and free of dirt and grease.

Lubricate O-Ring lightly with SUPER LUBE GREASE. Do NOT use oil. Oil will swell O-Ring and keep wheel from seating properly.

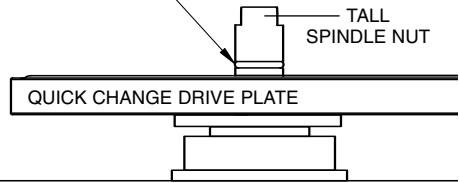

PARTS LIST FOR #001-838

- | | | |
|---|----------|----------------------------------|
| 1 | #011-397 | Quick Change Drive Plate |
| 2 | #011-415 | Tall Spindle Nut |
| 3 | #002-780 | O-Ring - 4 1/2" X 4 7/8" X 3/16" |
| 4 | #002-084 | O-Ring - 3/8" X 1/2" X 1/16" |



900 Overlander Road
P.O. Box 1153
Emporia, KS 66801

1-800-835-3519

Fax: 620-343-9640

Tel: 620-343-1084

e-mail: GRS@GrsTools.com

